

SoCal Diesel

LB7 FICM **Alternative Firing Order** **Wiring Instructions**

For use only with SoCal Diesel Alternative Firing Order Camshafts

For 2&5 - FICM C2 pin 121 Lt Green colored wire, circuit IC16 fuel injector 2 command, swap with FICM C2 pin 116 Lt-Green/Red colored wire, circuit IC19 fuel injector 5 command.


For 3&8 - FICM C2 pin 115 Lt-Green/Black colored wire, circuit IC17 fuel injector 3 command, swap with FICM C2 PIN 120 Lt-Green/Green colored wire, circuit IC22 fuel injector 8 command.

For 6&7 - FICM C1 pin 59 circuit IC20 and pin 60 circuit IC520 (2 wires) Lt-Green/Purple colored wire, fuel injector 6 command, swap with FICM C1 pin 61 circuit IC21 and pin 62 circuit IC521 (2 wires) Lt-Green/Orange colored wire, fuel injector 7 command.

*Disclaimer: There is no warranty expressed or implied.
User assumes all liability for use of this information.

SoCal Diesel
27833 Avenue Hopkins Suite # 6
Valencia, CA 91355
661-775-5620
www.socaldisel.com

Fuel Injection Control Module C1 Connector

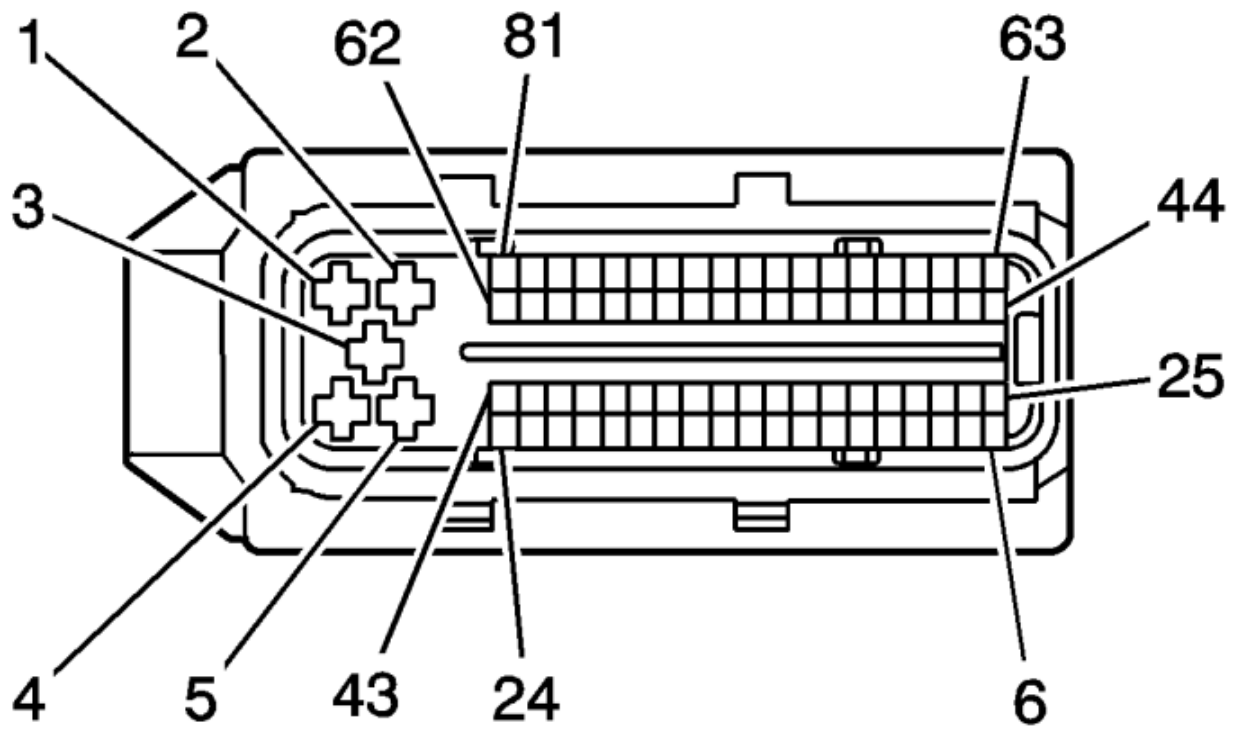

Fuel Injection Control Module C2 Connector

