

SoCal Diesel

LLY FICM Alternative Firing Order Wiring Instructions

For use only with SoCal Diesel Alternative Firing Order Camshafts

For 2&5 - Swap FICM **C2** pin 121 (White/Yellow), with FICM **C2** pin 116 (Red/L-Green).


For 3&8 – Swap FICM **C2** pin 115 (White/L-Blue), with FICM **C2** pin 120 (White/Green).

For 6&7 – Swap FICM **C1** pin 59 (D-blue/white) with FICM C1 pin 61 (White/Red) and swap FICM **C1** pin 60 (D-Blue/White) with FICM C1 Pin 62 (White/Red) .

*Disclaimer: There is no warranty expressed or implied.
User assumes all liability for use of this information.

SoCal Diesel
27833 Avenue Hopkins Suite # 6
Valencia, CA 91355
661-775-5620
www.socaldisel.com

Fuel Injection Control Module C1 Connector

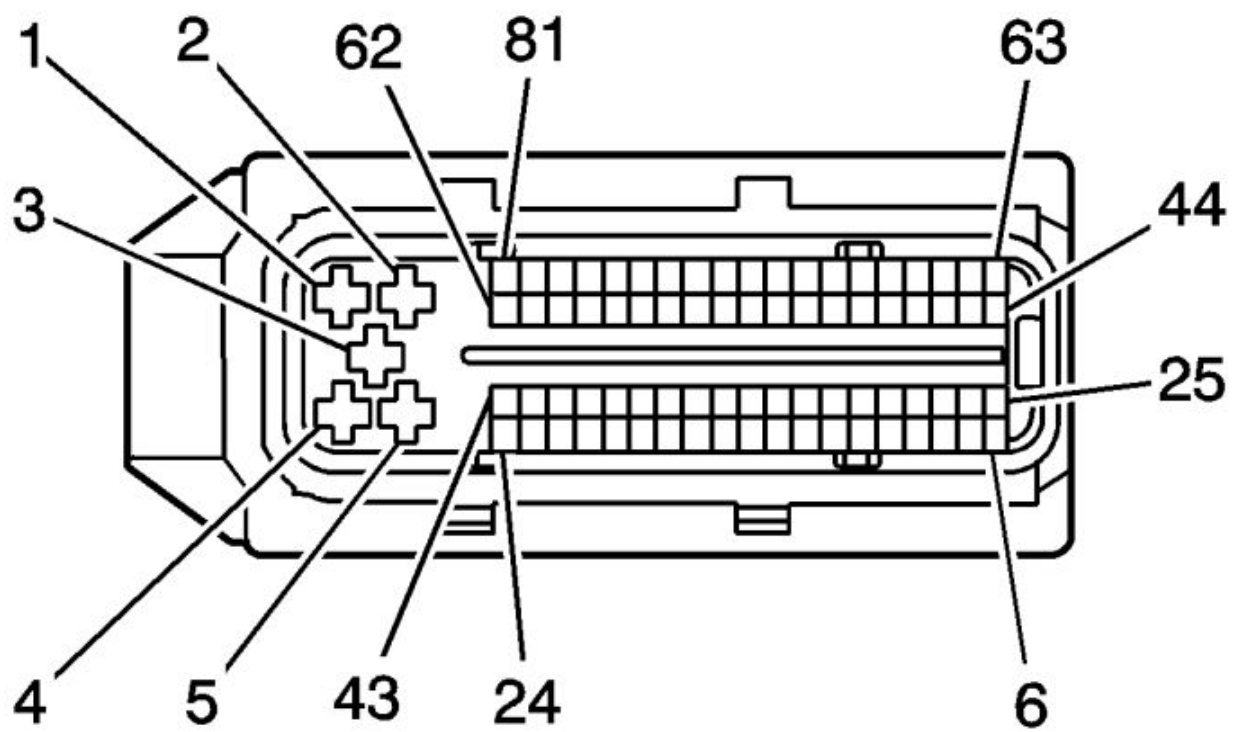

Fuel Injection Control Module C2 Connector

