



Part # 100-175

Classic Body Transfer
Case Support Brace



Step 1: Use impact or ratchet wrench to remove bolts shown in the figure to the right.


Step 2: Place DHD Transfer Case Brace in place. Once in place, use the existing hardware to fasten the brace in place. Please follow the torque specifications below.

Tool List:

- Torque Wrench (3/8" Drive)
- 15 mm 3/8" Drive Socket
- 10 mm 3/8" Drive Socket
- Extensions (3/8" Drive)

Torque Specifications:

- Transmission Bolts – 37 ft. lbs.
- Transfer Case Bolts – 37 ft. lbs.

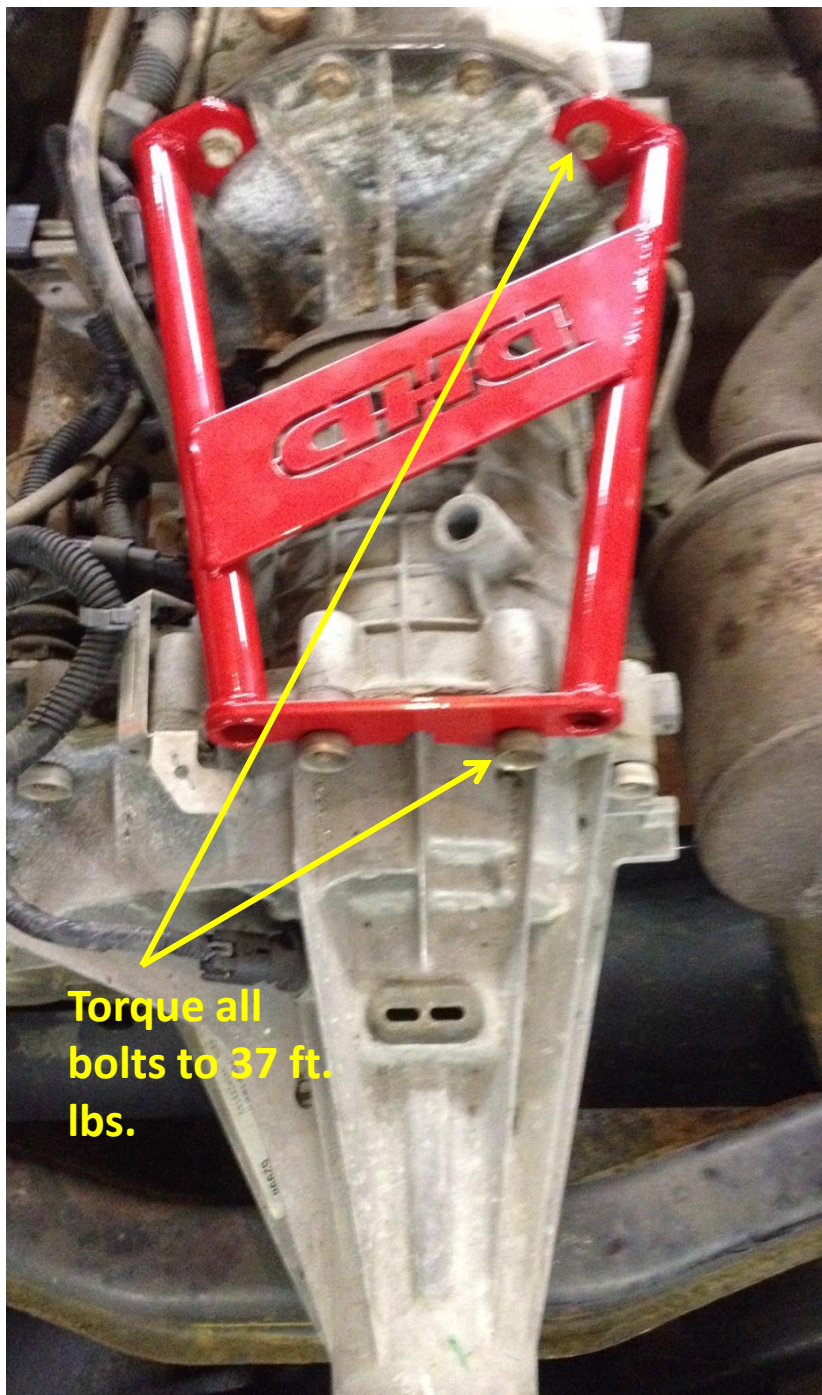

Torque all
bolts to 37 ft.
lbs.