



227 Industrial Dr
Harbor Beach MI 48441
989-479-0444
www.dirtyhookerdiesel.com



#800-064 INSTALL INSTRUCTIONS

FITMENT: 2008-2010 Ford 6.4L Powerstroke

- 1) Verify application, verify part number ordered and instructions match.
- 2) Clean and inspect all hardware.
- 3) Clean and inspect threads in block. Thread chase if needed. (M16x2.00, M8x1.25)
- 4) Thread studs into block by hand, adding thread sealant to threads that protrude into water jackets.
- 5) Loctite is permitted on studs that are intended to be permanent.
- 6) Install cylinder heads.
- 7) Lubricate the stud threads, washers and nuts with provided ARP Ultra Torque Assembly Lubricant.
- 8) Following the manufacturer's torque sequence, tighten hardware in 3 equal steps.
- 9) Final torque values:


M16 Bolts 1-10

275ft lbs

M8 Bolts 11-15

25ft lbs

BOLT TORQUE SEQUENCE

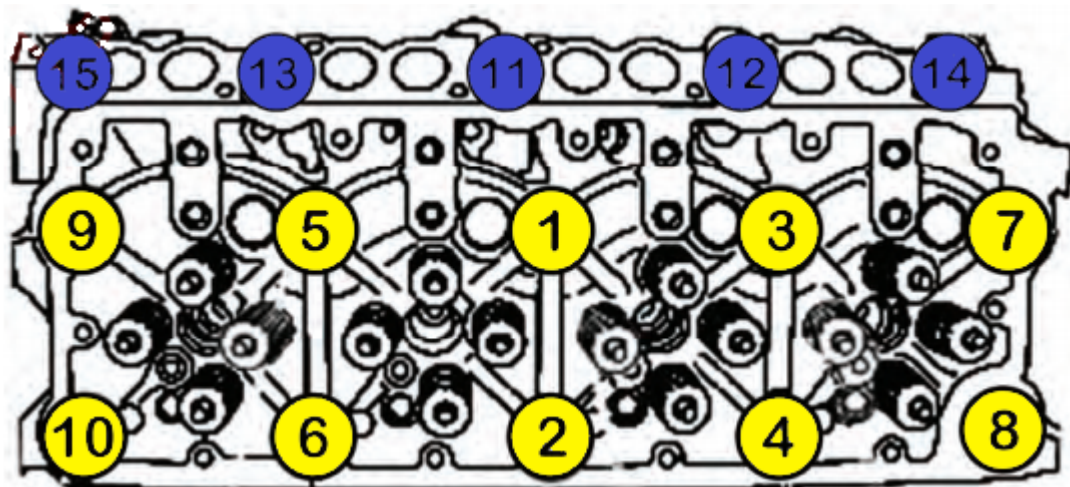

THANKS FOR YOUR PURCHASE!